
 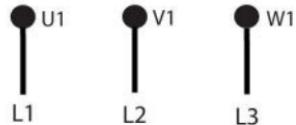


All rotation directions are based when viewed at shaft


MS Three Phase Motors

Star Connection




Connect links as shown below

Delta Connection

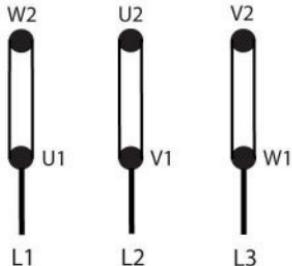


MY Single Phase - Perm Cap

Clockwise Rotation ↗

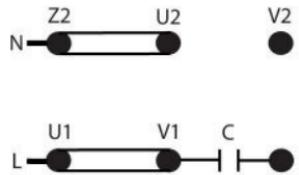


Anti Clockwise Rotation ↘

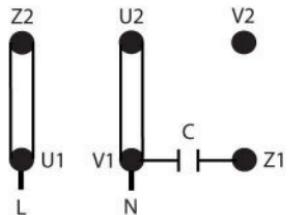

ML Single Phase - Cap Start / Cap Run

Clockwise Rotation ↗

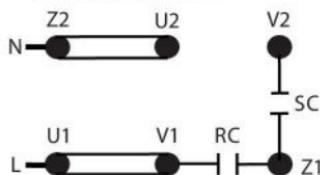

Anti Clockwise Rotation ↘

